

HUSHING CLIPSAL ALARMS



STEP 1

CHECK FOR FIRE

If there is a fire evacuate immediately and call 000. If there is no fire, proceed to step 2.



STEP 2

FIND INITIATING SMOKE ALARM WITH FLASHING RED LIGHT



STEP 3

PRESS HUSH BUTTON ON INITIATING ALARM TO SILENCE ALL SMOKE ALARMS

Press and hold for one second.

YOU SHOULD NOT NEED TO PHYSICALLY REMOVE THE ALARM FROM THE CEILING

NEXT STEPS

- If more than one alarm has a flashing red light the test/hush button may need to be pressed on these alarms as well for all alarm to hush.
- After pressing the test/hush button *BE PATIENT* you will need to wait for all the alarms to stop sounding.. this can take several minutes.
- The alarms will then be in hush mode and if there is still smoke in the air the alarms may trigger again in 10 minutes. Keep using the test/hush button until the smoke has cleared.
- Sometimes other things trigger the alarm such as humidity, insects or dust and can get trapped in the alarm causing them to trigger when there isn't smoke. In this case you can remove each alarm from the ceiling and clean it with a standard household vacuum.

REMOVING MOST COMMON CLIPSAL ALARM TYPES FROM CEILING


230V mains powered alarm model -
Clipsal 755PSMA4



TO REMOVE:

- Press latch button on side to base plate (shown above) so that alarm swings down away from ceiling.
- Remove 9v battery
- Contact your agent to advise them you have taken an alarm down.

Lithium wireless interconnected
model - Clipsal 755LPSMA4

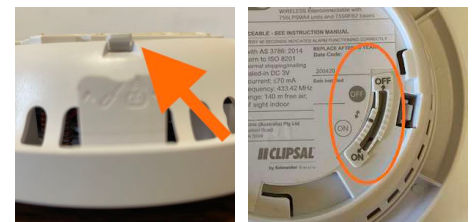

TO REMOVE:

- Twist anticlockwise. A flat screw driver might be needed to lift the latch (shown above) before easily twisting the alarm.
- On the back of the alarm slide the switch up and to the "off" position (shown above).
- Contact your agent to advise them you have taken an alarm down