

FIRE TEK[®] Mounting base
755RFB2
Smoke Alarm Mounting Base
with Wireless Interconnect, MK2

More information is available

Scan the QR code for more information about your Clipsal smoke alarm:

- What smoke alarms can and cannot do
- Developing and practicing a plan of escape
- What to do if an alarm sounds

General information

This product fits with the following Clipsal Smoke alarms:

- 755RLPSMA2
- 755RLPSMA4
- 755PLPSMA2
- 755PLPSMA4

Compatibility

This product fits with the following Clipsal Smoke alarms:

- 755RFB base, third party products, or third party systems or fire panels.
- This product is wirelessly compatible with 755LPSMA4 and 755RFB2.

For your safety

A DANGER

RISK OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- This product must only be installed and serviced by appropriately qualified and/or licensed electrical personnel.
- This product must only be used for the purpose described in these instructions and must be installed in accordance with the wiring rules and regulations in that location.
- Isolate the electrical supply before doing any work on this product.
- Ensure the product has been correctly installed and tested for safe operation before reconnection of the electrical supply.

Failure to follow these instructions will result in death or serious injury.

A CAUTION

EQUIPMENT INSTALLATION HAZARD

- All interconnected smoke alarms (max 40) must be supplied from the same interconnection. A common Neutral must be used for the interconnection to operate.
- DO NOT connect to a 'w' which also has individual loads connected. Supplying multiple individual loads may damage electrical components within the wireless base or connected smoke alarm.
- Make sure each alarm is fitted to a base and power is supplied before setting up interconnection.
- Do not open this base, as there are no user-serviceable parts inside.

Failure to follow these instructions may result in injury or equipment damage.

Choosing the installation location

NOTICE

EQUIPMENT INSTALLATION COMPLIANCE

This product must be installed in accordance with the National Construction Code and any local state legislation requirements.

Failure to follow these instructions may result in a non-compliant installation.

Mounting the smoke alarm

Interconnecting smoke alarms

Wireless interconnection pairing

Disposal

It is recommended to dispose of this device at an authorized electronic waste collection point. Professional recycling protects people and the environment against potential negative effects.

Technical data

Main Power Source	220-240 V a.c., 50 Hz
Secondary Power Source	Sealed rechargeable battery
Battery Life	10 years (with main power supplied)
Operating Current	<60 mA
Operating Temperature	-5 °C to 45 °C
Ambient Humidity	5% to 95%
Interconnecting	Max 40 alarms (wireless) Max 40 alarms (wired over 100 m)
Terminal provisions	Active, Neutral, Loop and Interconnect terminals, each accommodates 2 x 1.5 mm ²
Transmit Frequency	433.42 MHz
RF Range	100 m free air, 30 m indoor line of sight
Local battery warning	Red LED flash once every 10 s
Remote Input	Dry contact momentary switch (for Remote Test/Hush function)
Pairing duration	2 min (revert after each successful pairing)
Approvals	Active, RCM
Complies with	AS/NZS 60995, AS/NZS X9661.1, AS/NZS 4202

Trademarks and certifications

Schneider Electric acknowledges that the Australian Standard Certified Product logo is a trademark of SAI Global, and that the Active Certified logo is a trademark of CSECO.

Warranty

We warrant this product to be free from defects in materials and workmanship for a period of 5 (five) years from the date of installation.

Customer care

If you have technical questions, please contact the Customer Care Centre in your country.

Australia

Schneider Electric (Australia) Pty Ltd
Customer Care Australia: 13 73 28
e: customercare.au@schneider-electric.com
www.schneider-electric.com.au

New Zealand

Schneider Electric (NZ) Ltd
After hours service: 0800 735 4357 (NZ only)
Customer Care NZ: 0800 652 999
e: sales@nz.schneider-electric.com
www.schneider-electric.com

Remote Test/Hush Function

The Remote Test/Hush feature is controlled by the smoke alarm. Wireless bases provide optional connection to smoke alarms in each wired group separately and in parallel through the common Test/Hush button for 10 seconds. Check all wired and wireless interconnected alarms sound and stop after <1 min.

Connection options for remote test/hush

• Connect remote buttons as either separate Test and Hush buttons, or as a single Test/Hush button to perform both functions.

• Wiring capacity of each terminal is 2x1.5 mm² cables.

• Combination terminal screw heat type.

• Max. cable length to Remote Test/Hush switch is 20 m.

Test function (when no smoke present)

Test the LOCAL smoke alarm

Press and hold either the Remote Test button or the Local Test/Hush button and release within 4 seconds. Only the local smoke alarm will sound.

Test the LINKED smoke alarms

Press and hold either Remote Test button or Local Test/Hush button for more than 8 seconds. The linked alarms will sound.

Test wirelessly interconnected alarms

After 8 seconds, a signal is sent to all alarms. When the wireless linked alarms detect the signal, they sound until the signal is no longer transmitted.

Hush function - when smoke present

To hush a smoke alarm, identify the alarm that triggered by the flashing red LED (alarm will not silence if it does not have a flashing red LED.) Pressing the local Test/Hush button or the remote hush button will silence the alarm.

All smoke alarms that are interconnected will also fall silent.

If multiple interconnected alarms have detected smoke and are flashing red LEDs, press the Remote Hush button or the local Test/Hush button on each alarm to silence.

After pressing Test/Hush button, wait 10 minutes prior to additional testing to avoid abnormal responses, as alarms have reduced sensitivity during this period.

F2848/01

FIA27374102_01