

POWERING OFF LIF6000 SERIES ALARM

REMOVING THESE ALARMS FROM THEIR BASE PLATE AND POWERING THEM OFF SHOULD ONLY BE DONE IF ALL ATTEMPTS TO HUSH THE ALARMS HAVE FAILED.

If you do this you must advise your property manager of this so a technician can be sent to resolve the issues with the alarms. Follow the steps below to remove and power off this alarm type.

240V ALARM: LIF6000

FOLLOW THESE STEPS



1. NOTE: This 240v alarm should have a green light illuminating to indicate 240v power is gaging to the alarm.
2. Slide the alarm off of its base plate in the direction showed by the embossed arrows on the face of the alarm.
3. Remove the 9v battery from the back of the alarm.
4. The left hand side switch needs to be in the down position for the alarm to be turned off.
5. After switching your alarms off contact your property manager to advise them you have done this.
6. A technician will then be sent to conduct further testing.

LITHIUM POWERED ALARM: LIF6000DCW



1. NOTE: This alarm is not connected to mains power so will not have a green illuminated light.
2. Twist the alarm off of its base plate (anticlockwise).
3. Removing the alarm from its base plate will turn the alarm off.
4. After removing an alarm contact your property manager to advise them you have done this.
5. A technician will then be sent to conduct further testing.